


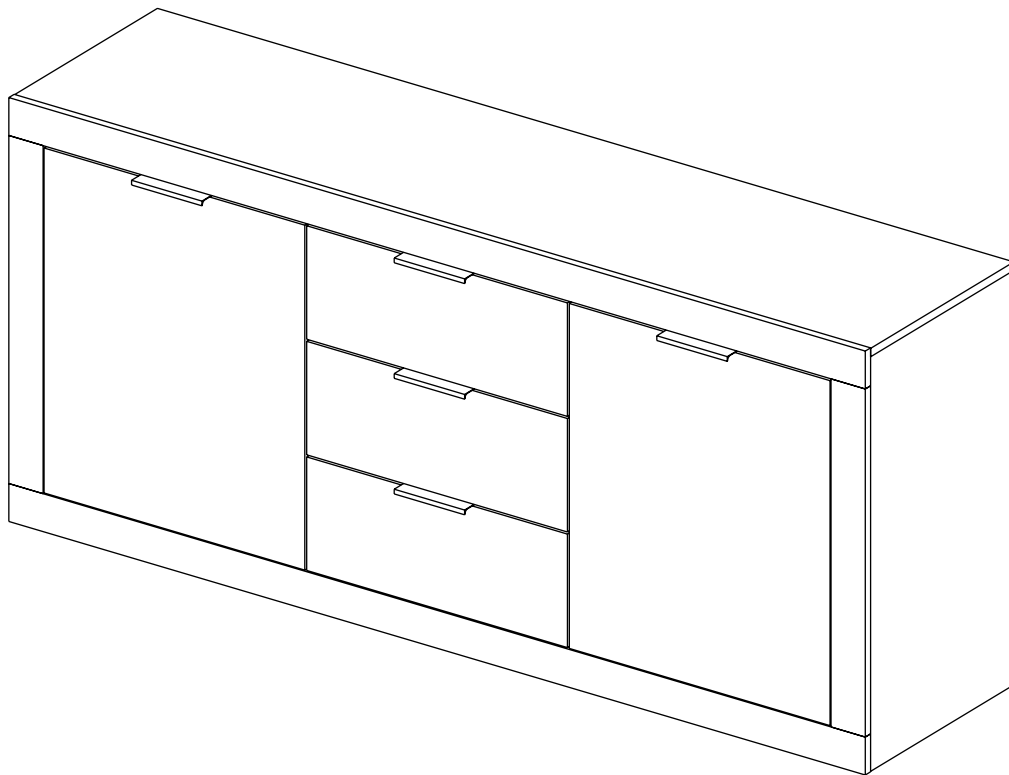
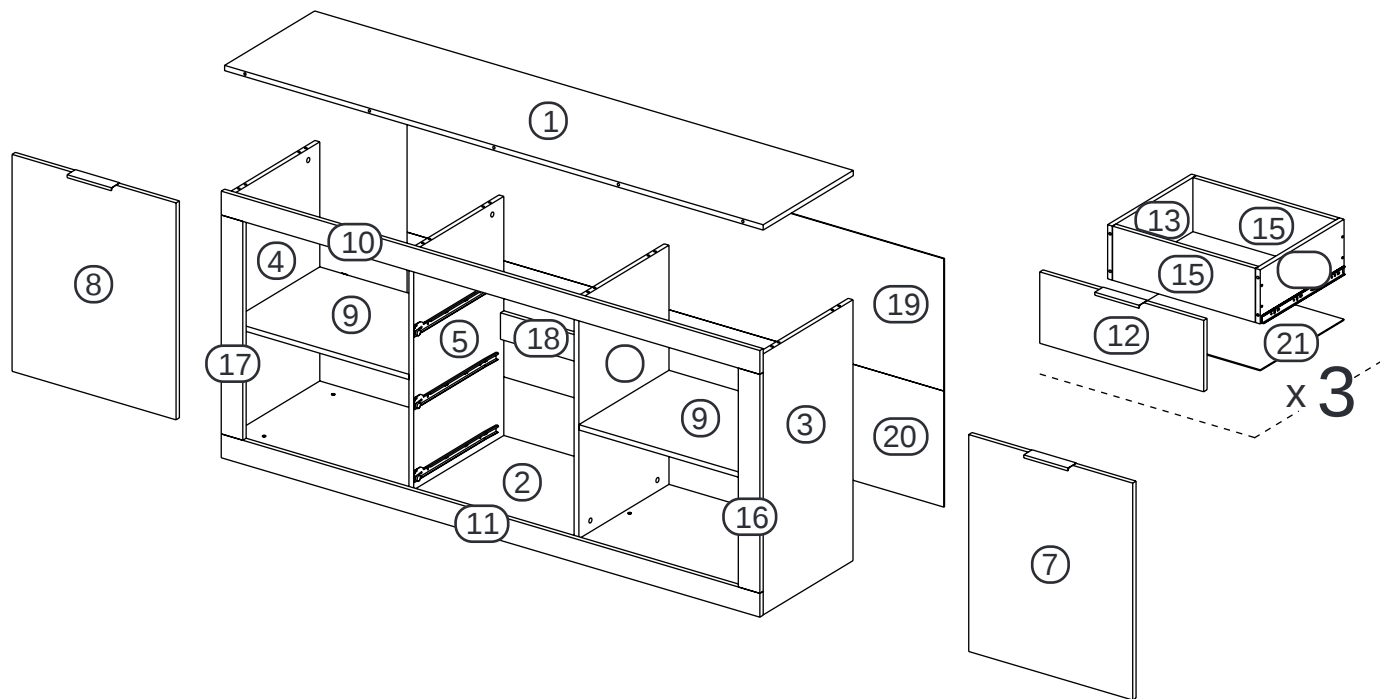
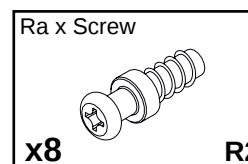
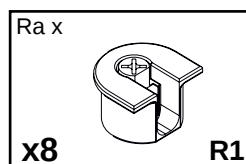
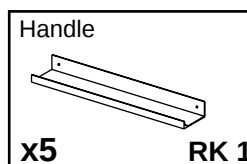
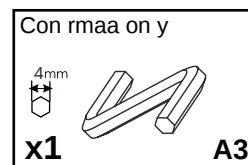
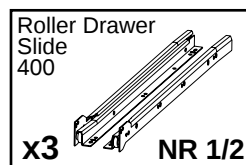
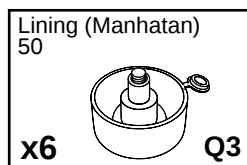
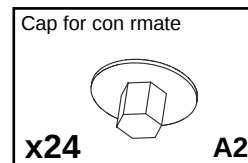
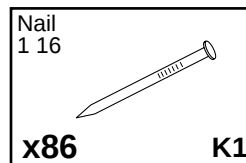
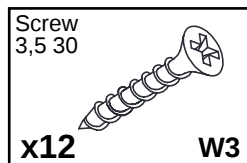
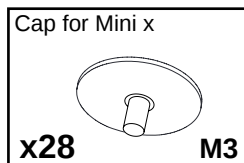
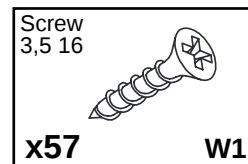
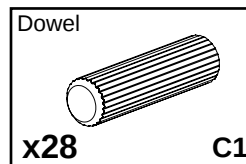
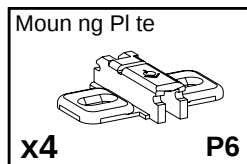
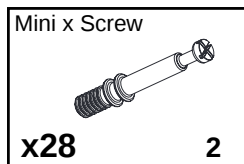
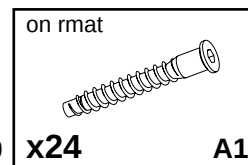


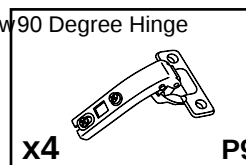


361-000102

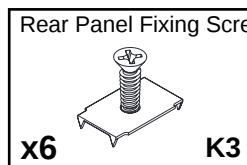



	a*b	X	Pack
1	1500x430	1	
2	1466x430	1	
3	788x430	1	
4	788x430	1	
5	722x430	1	
6	722x430	1	
7	655x448	1	
8	655x448	1	
9	499x430	2	
10	72x1500	1	
11	72x1500	1	
12	216x448	3	
13	400x164	3	
14	400x164	3	
15	378x164	6	
16	661x72	1	
17	661x72	1	
18	80x436	1	
19	399x1494	1	
20	351x1494	1	
21	410x400	3	

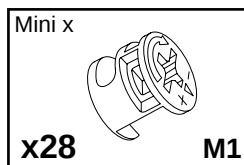

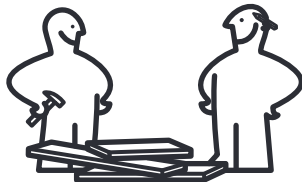


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

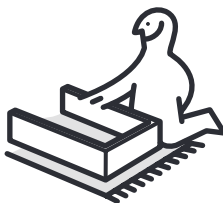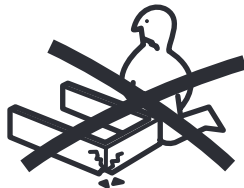

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

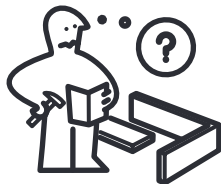

1

Mini x



x12

M1


Roller Drawer
Slide
400



x3

NR 1


Screw
3,5 16



x12

W1


Ra x Screw



x4





R2

Mini x Screw




x4

2

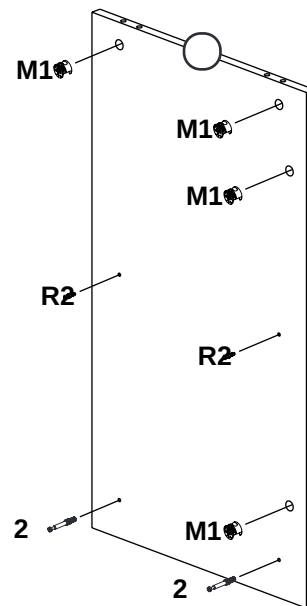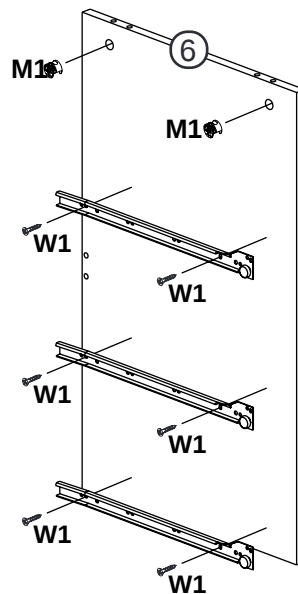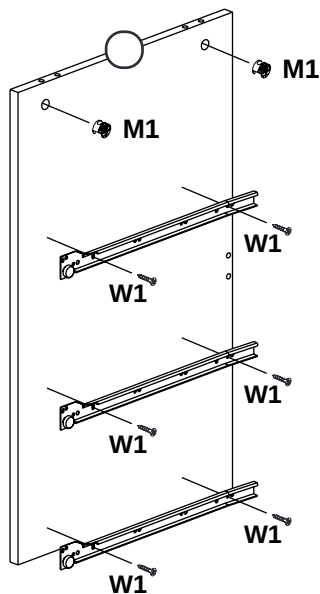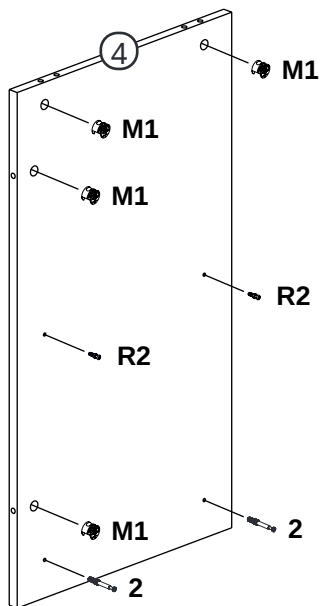

2


Mini x



x12

M1


Dowel



x8

C1


Mini x Screw



x8



2

Lining (Manhatan)
50




x6

Q3

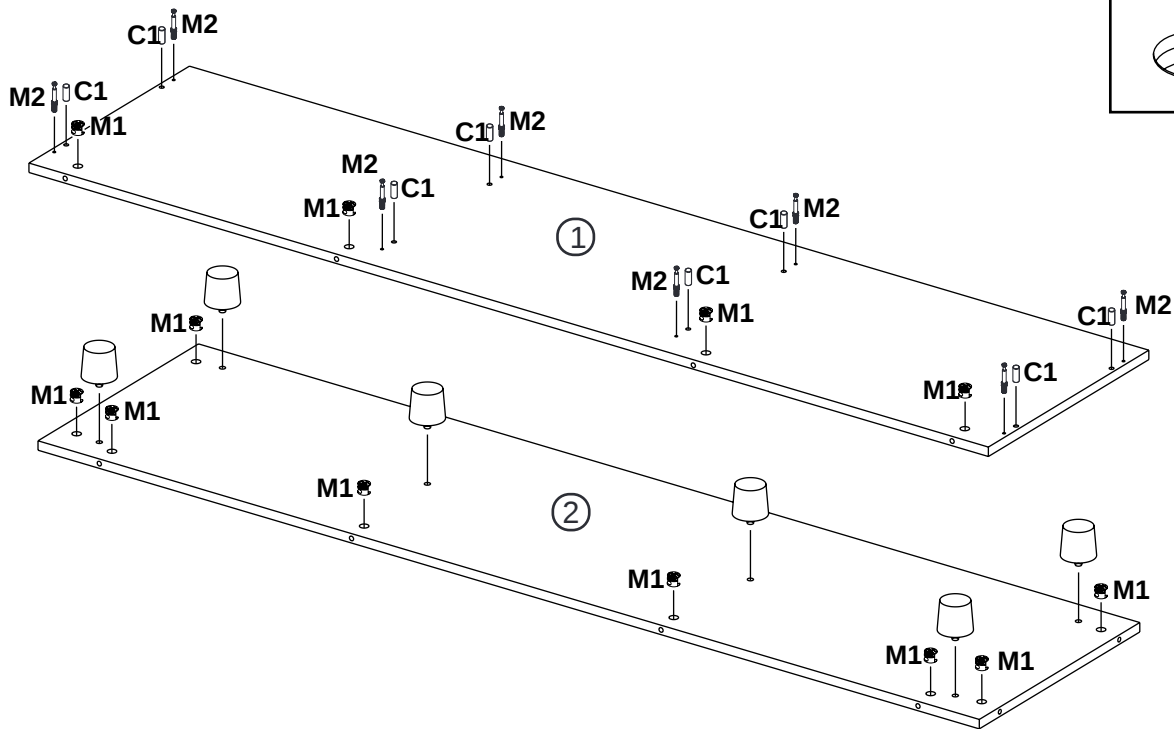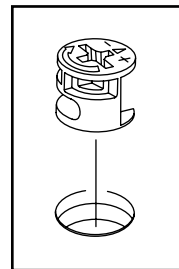





3

Dowel









x4

C1

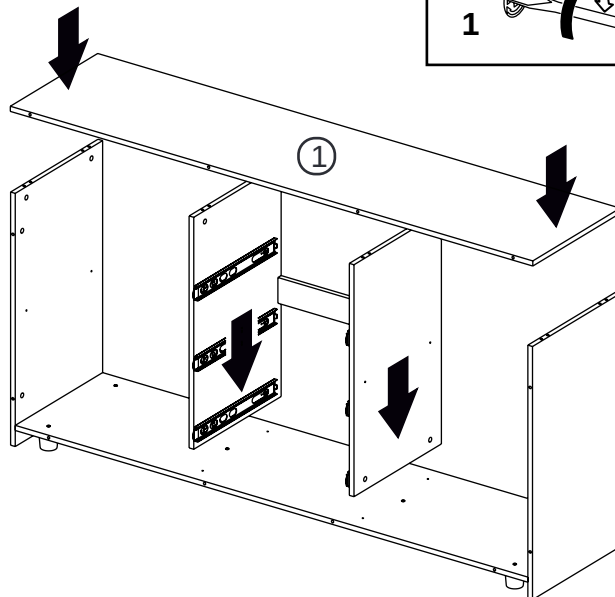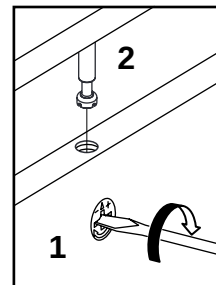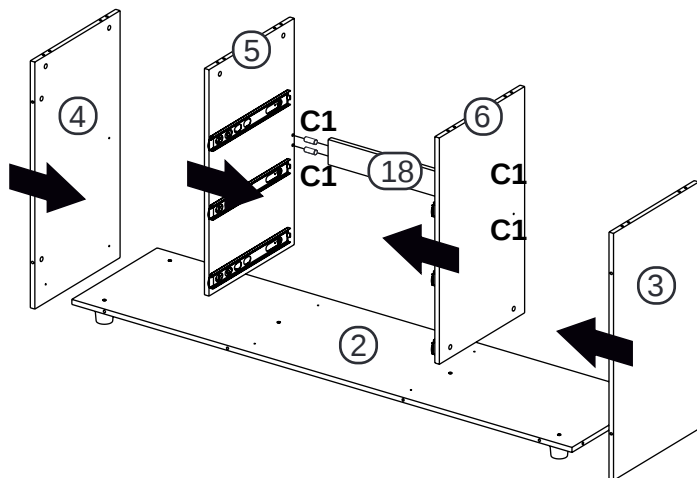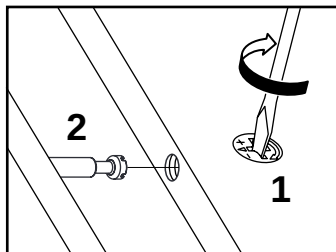


5

Rear Panel Fixing Screw

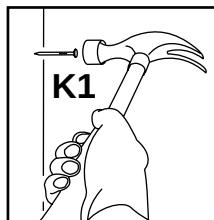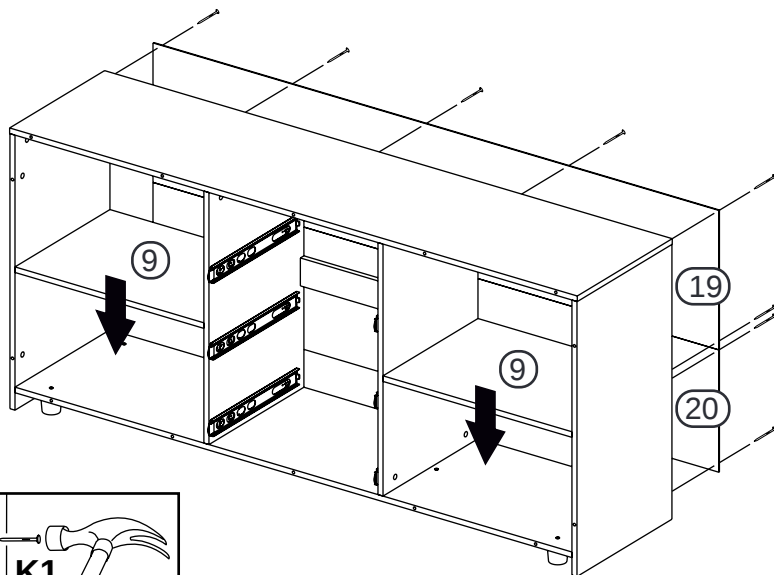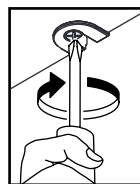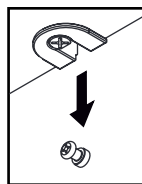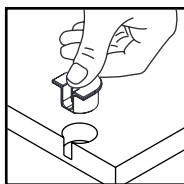
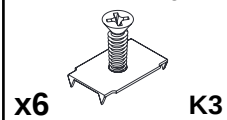


6

Mini x Screw

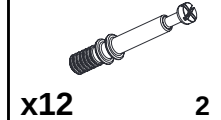


Moun ng Plate

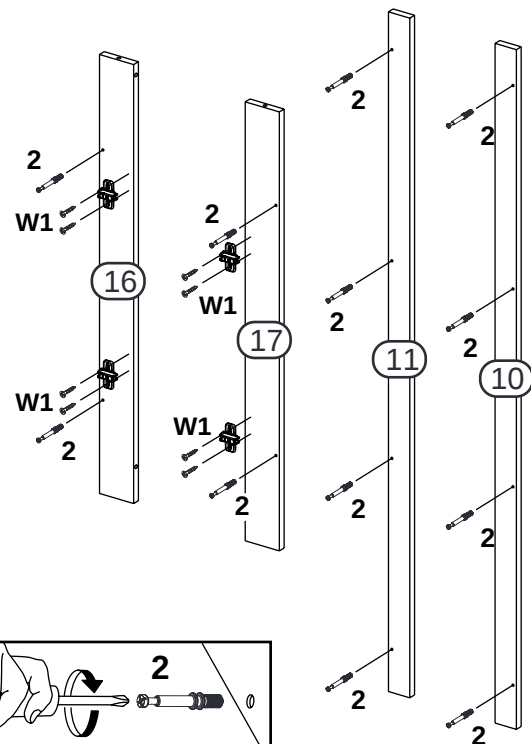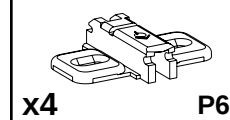


7

Dowel





x4

C1

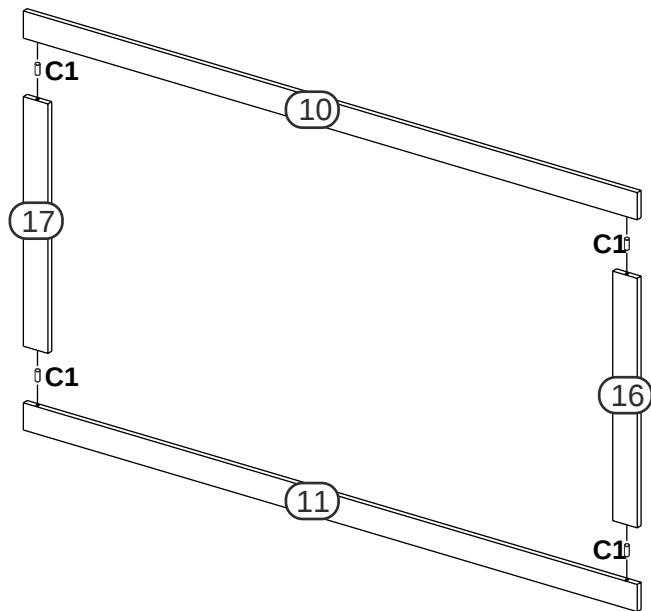


8

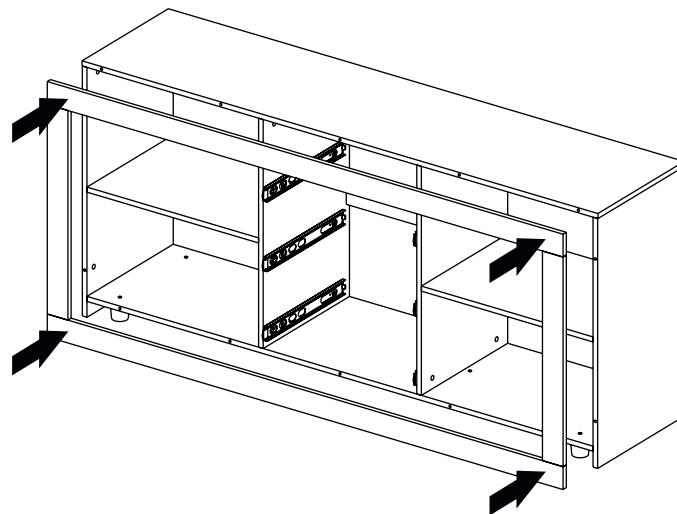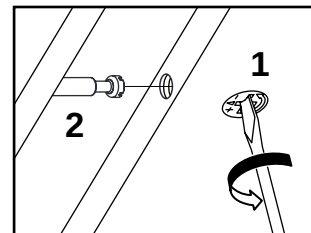

on rmat

x8

A1



Cap for con rmate

x8

A2









10

Nail
1 16


x14

K1

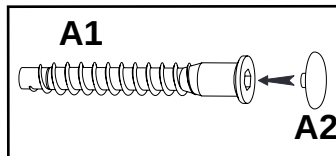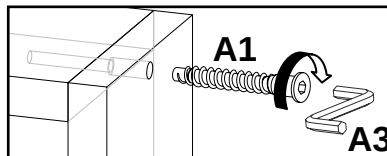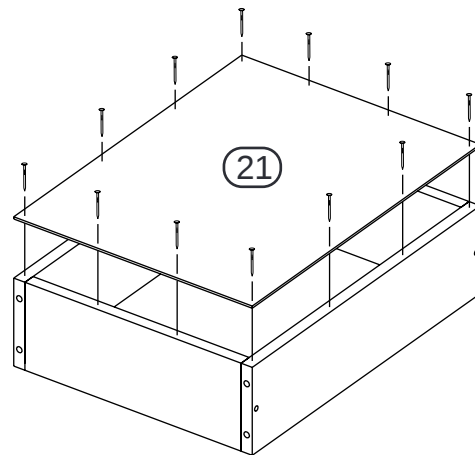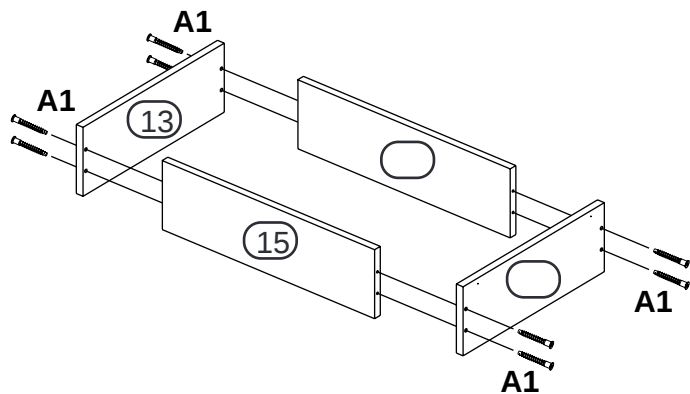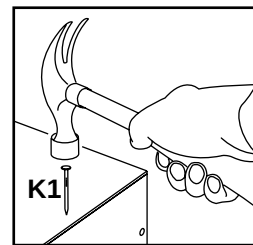

11


Screw
3,5 30



x4

W3

Dowel




C1

Handle




x1

RK 1

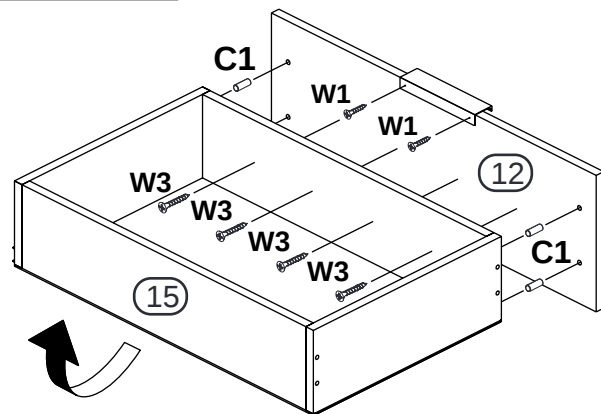


Roller Drawer
Slide
400

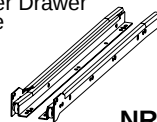

x3



NR 2

Screw
3,5 16



x6


W1

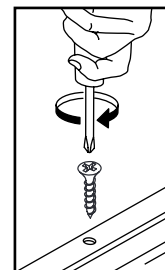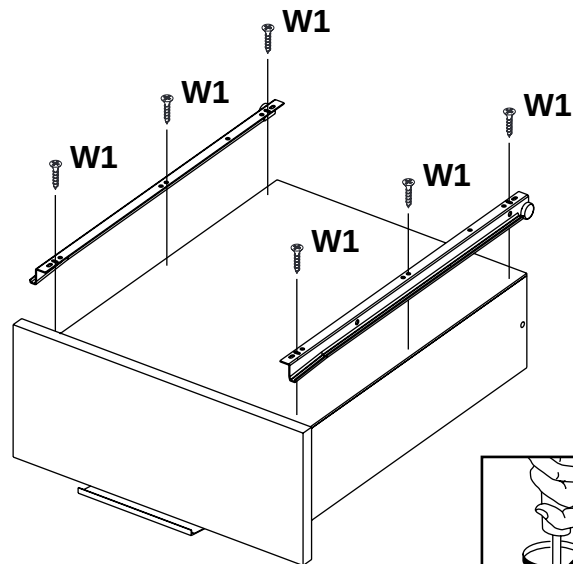

13

90 Degree Hinge


x4



P9

Screw
3,5 16

x12




W1

Handle



x2

RK 1

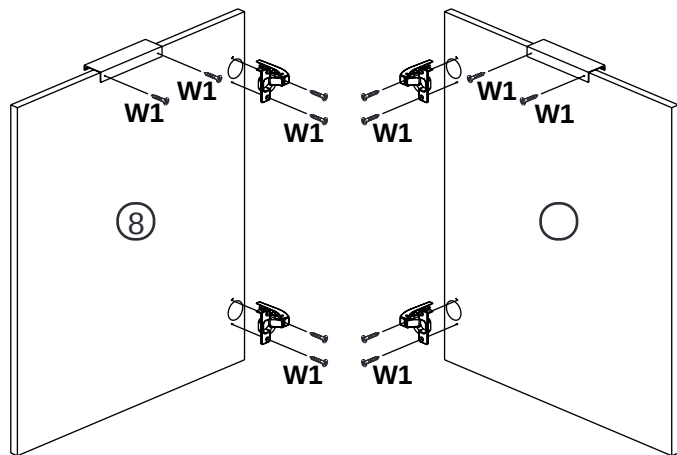

14

