

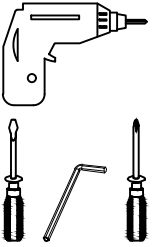
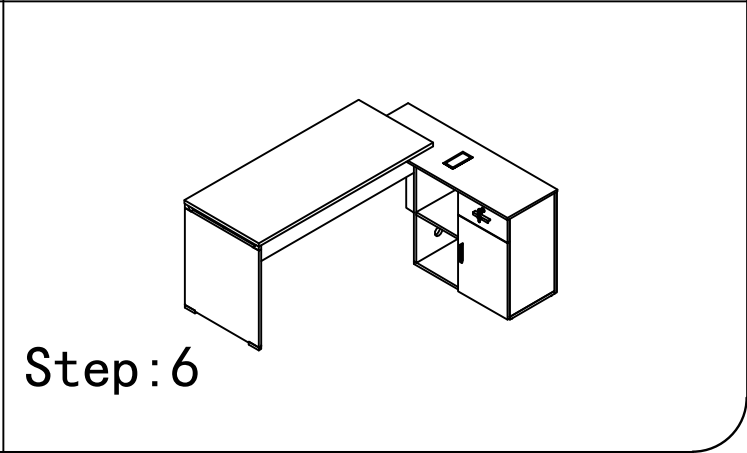
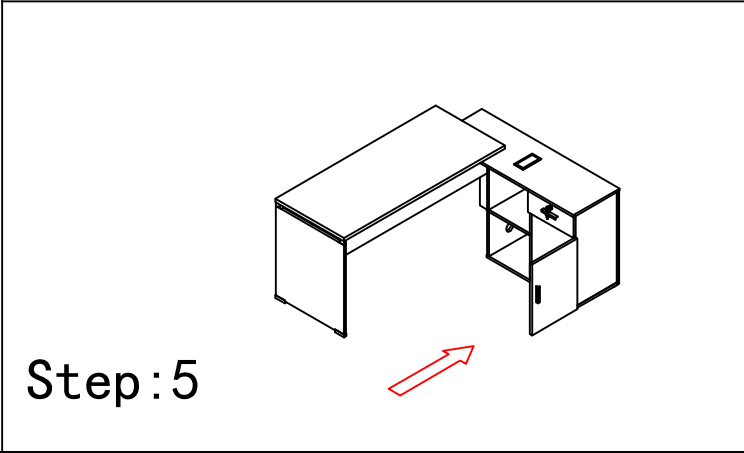
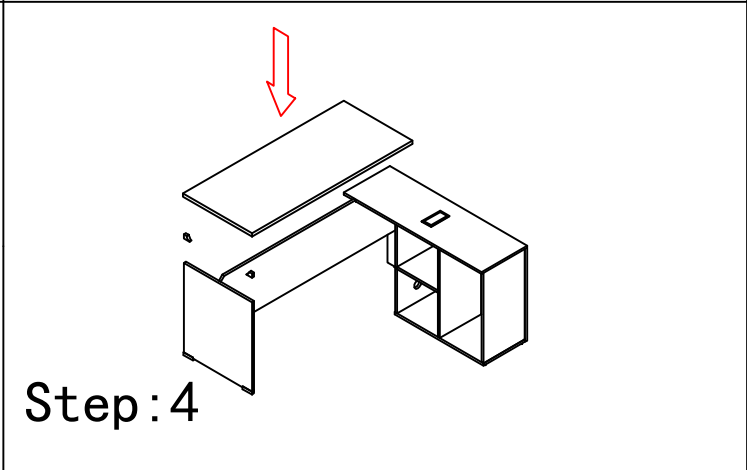
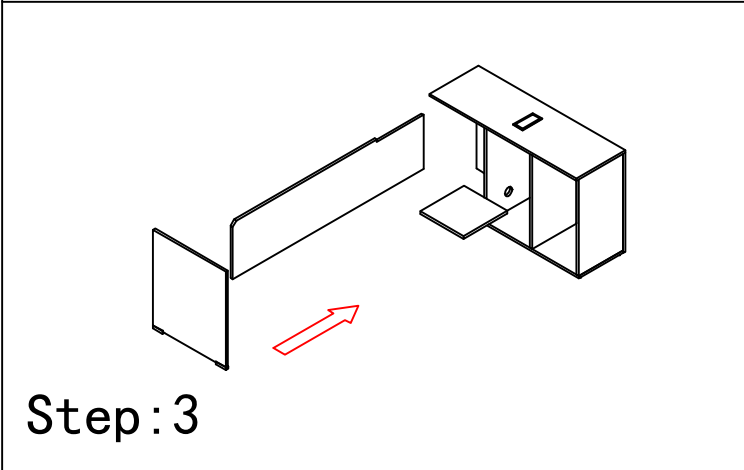
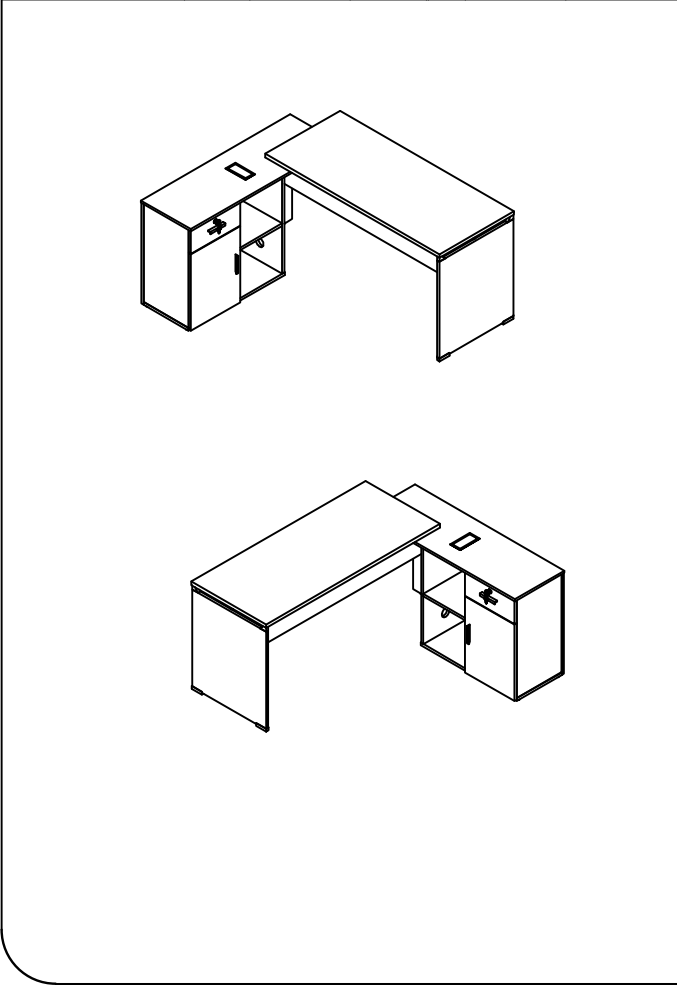
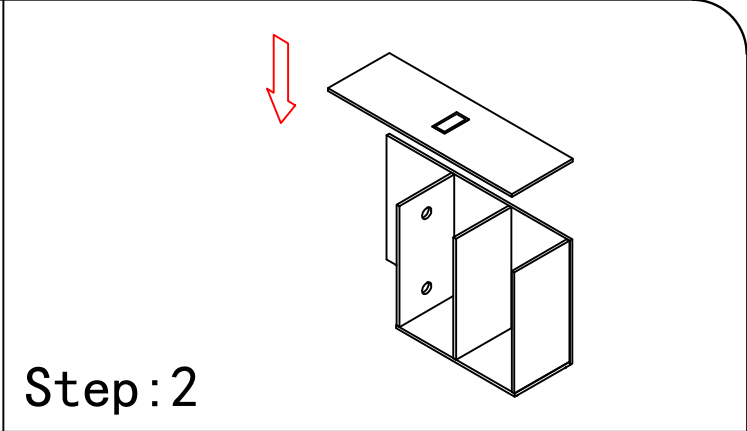
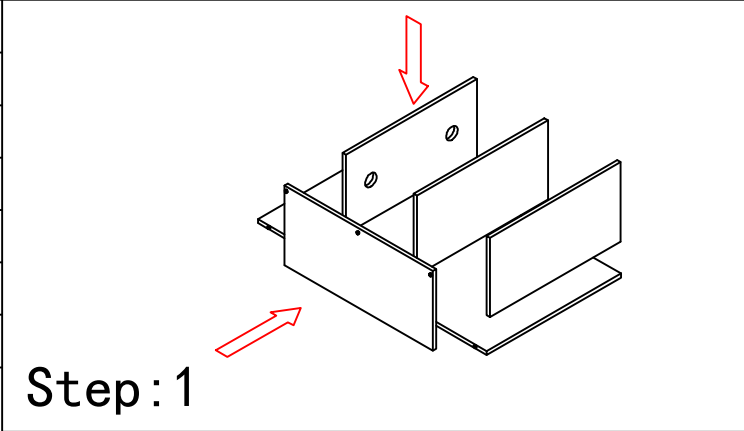


Tools		Connecting Parts					
	A		42	G		60	
	B		24	H		4	
	C		2	J		4	
	D		1	K			
	E		1	L			
	F		2	M			

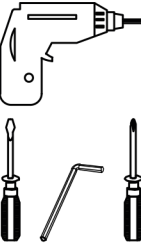


Assembly Drawing


Tools		Connecting Parts					
	A		42	G		60	
	B		24	H		4	
	C		2	J		4	
	D		1	K			
	E		1	L			
	F		2	M			

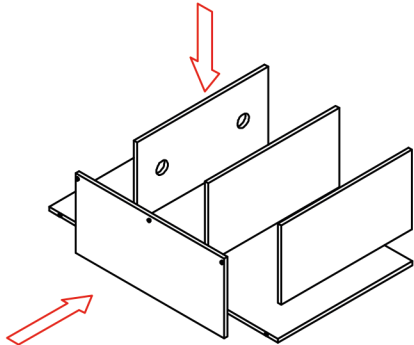


Step:1

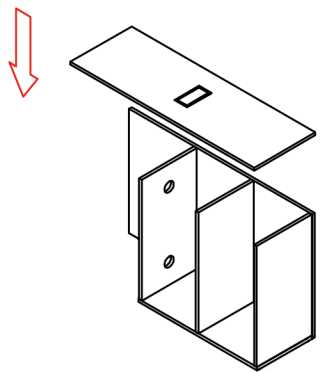


Step:2

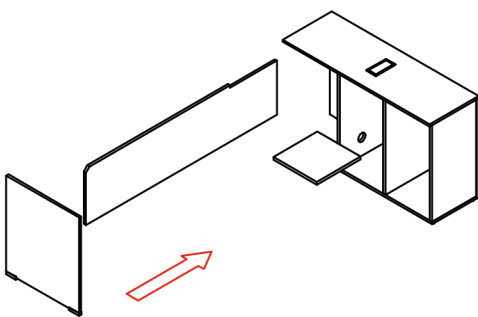


Step:3

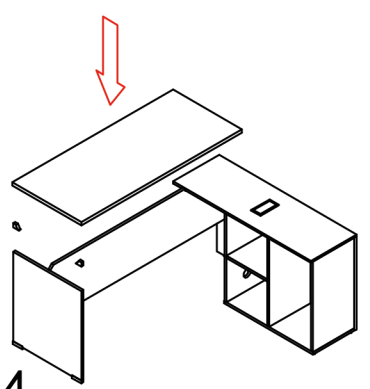

Step:4


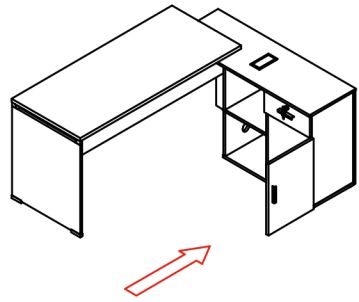


Step:5

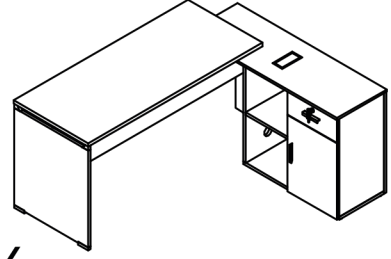


Step:6

	W	D	H	
1	1400	600	25	1
2	682	594	18	1
3	1560	400	18	1
4	1200	400	18	1
5	1196	702	18	1
6	775	359	18	1
7	684	359	18	3
8	353	355	18	1
9	396	533	18	1
10	396	160	18	1
11	350	100	18	2
12	301	85	18	1
13	312	355	4	1

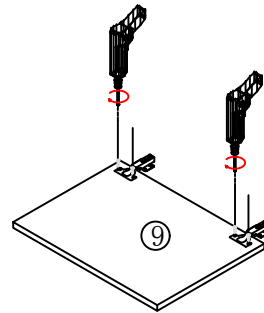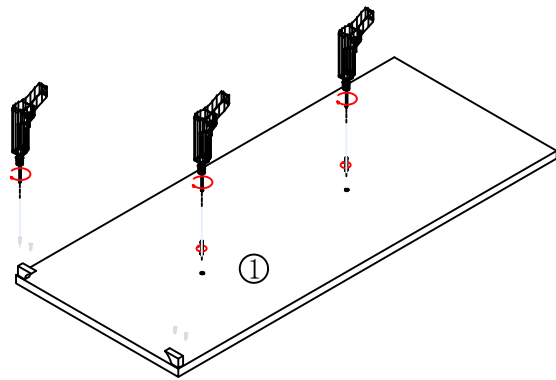


Step:1 Install all the three-in-one rods with tools,



The countertops are installed with self-tapping supports, and the door panels and hinges are installed with self-tapping.

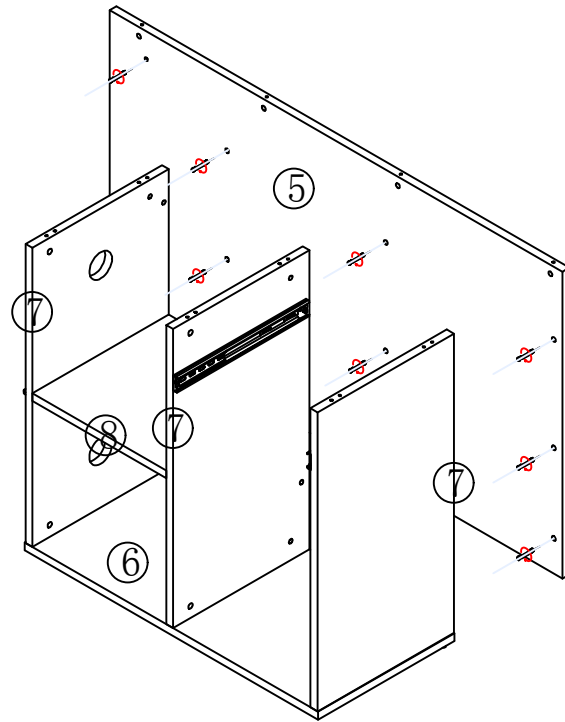


Step:2 Assemble the cabinet and
lock it with three-in-one fasteners
Install the drawer guide
with self-tapping

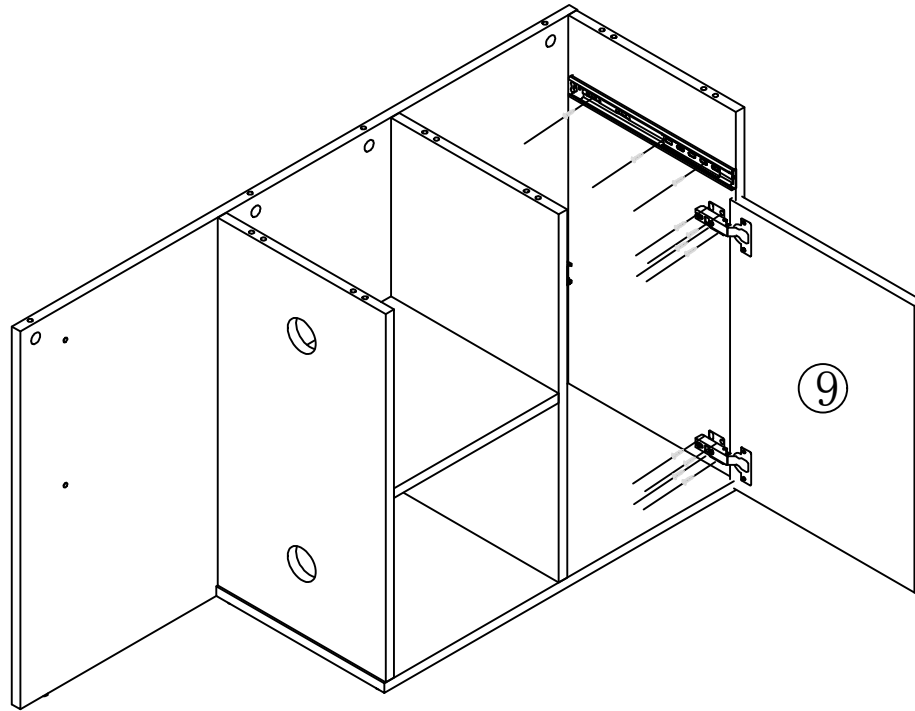


Step:3 Install the door panel
with self-tapping

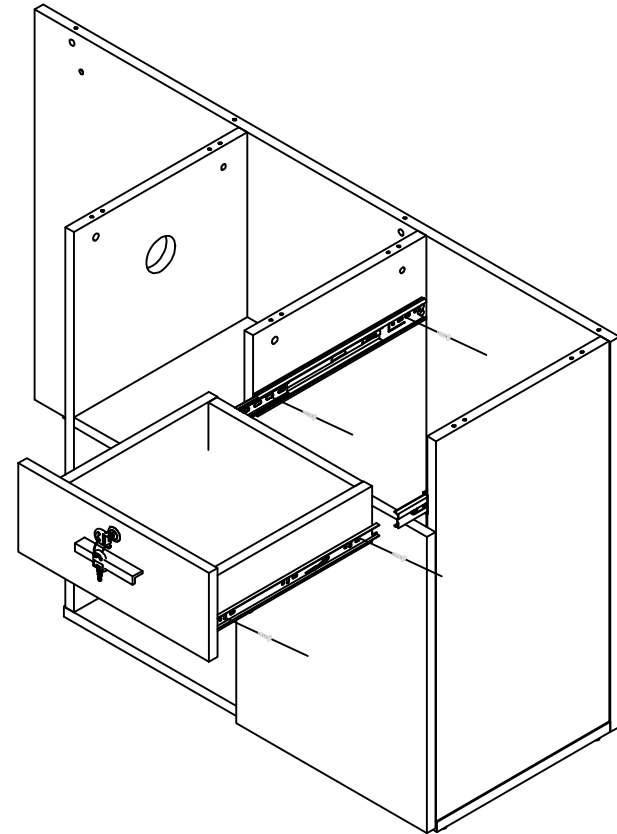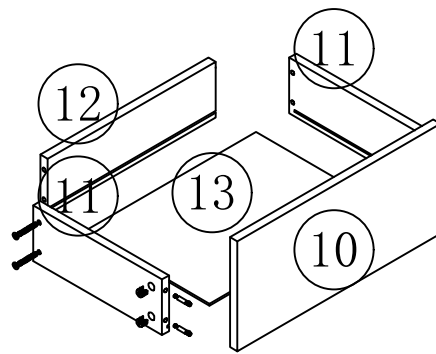


Step:4 Install the drawer

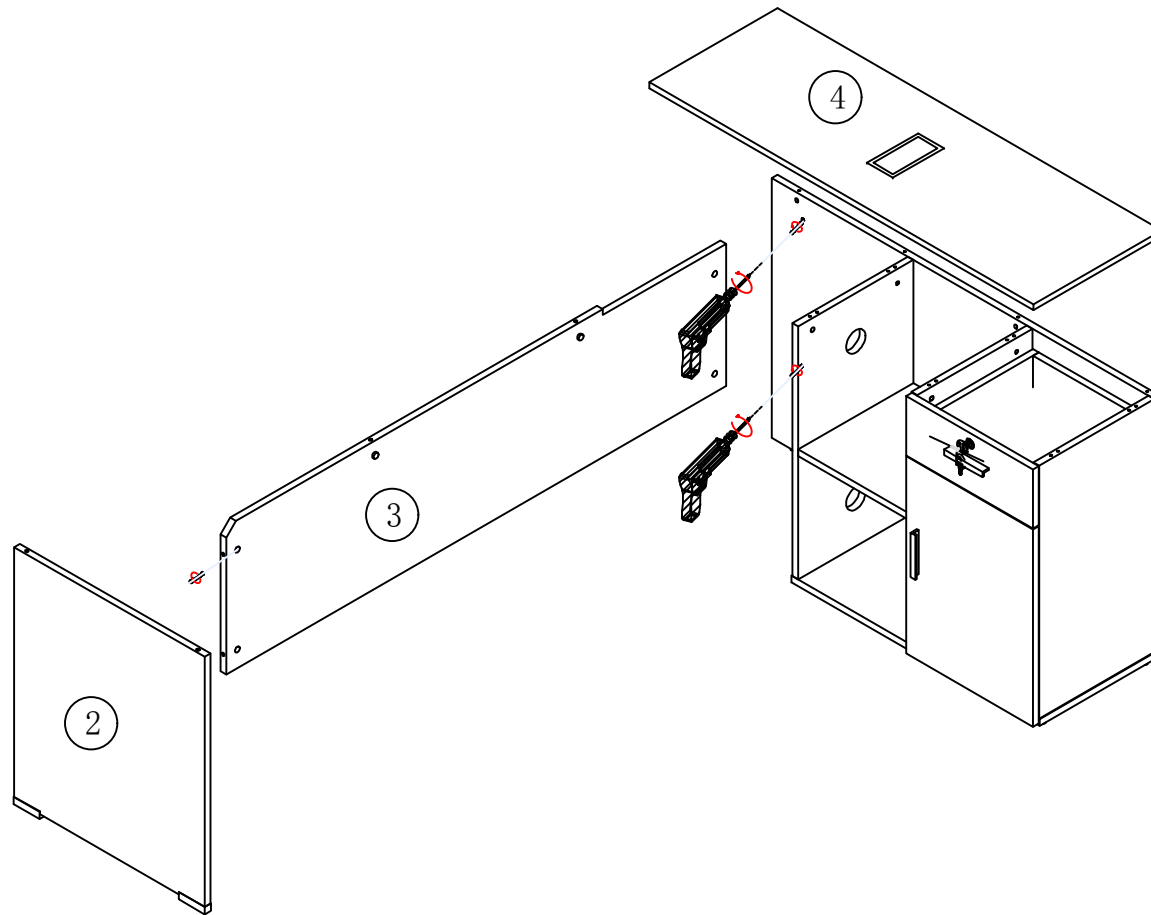

Step:5 Assemble the table leg pull plate and lock it with three-in-one fasteners

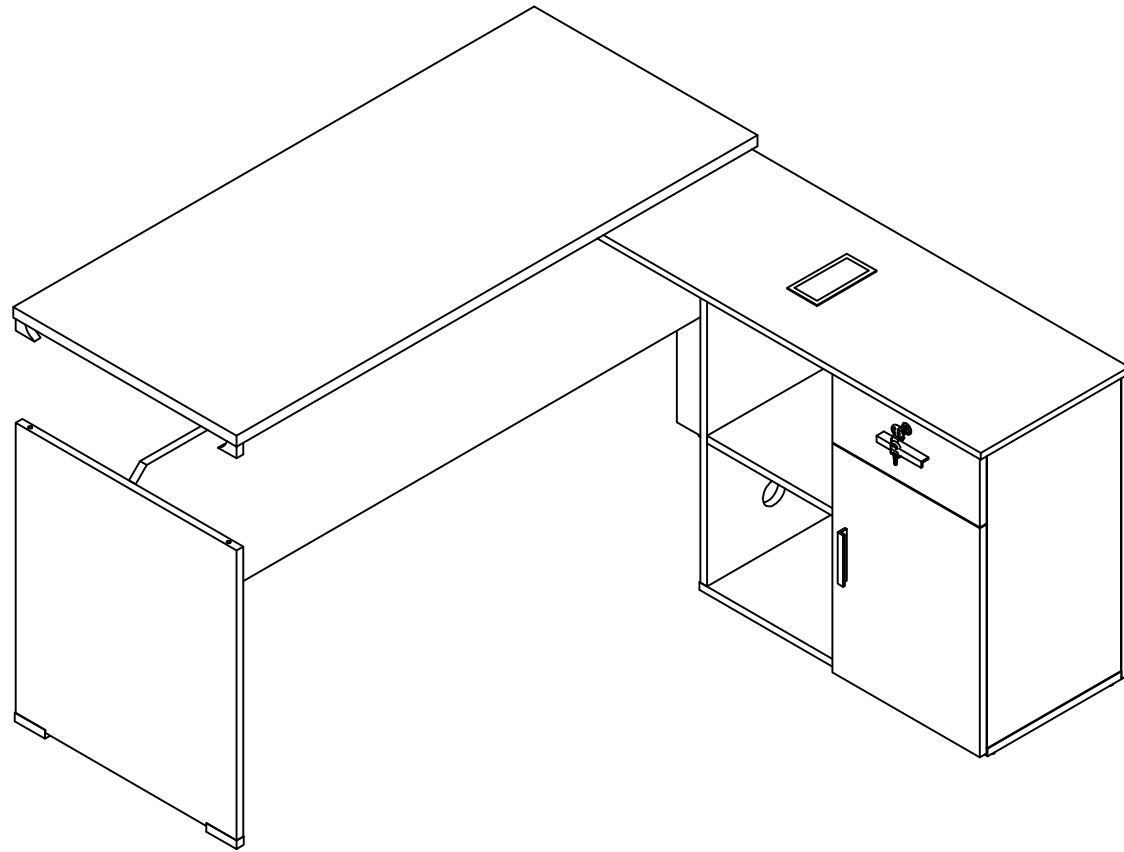

Step:6 Assemble the countertop and lock it with three-in-one fasteners

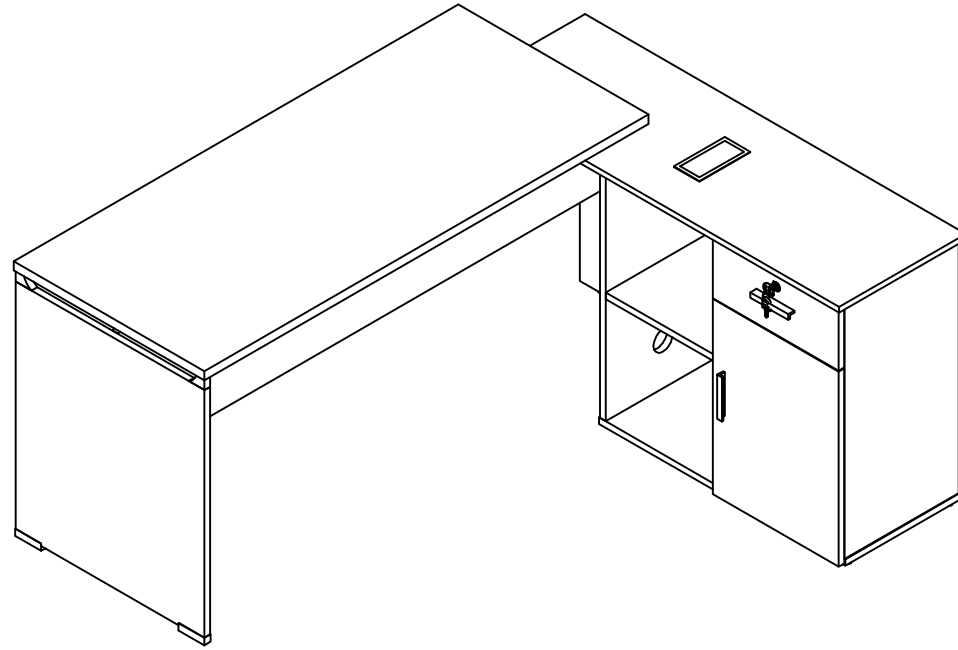

Step:7 Installation is complete