













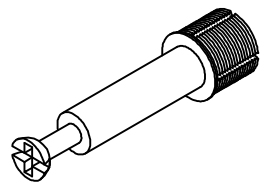


246-000003


Minifix Screw  X36 A	Screw 4*30  X4 F	Whole overlay hinge  X2 K	 
Minifix  X36 B	Drawer rail  X1 G	Wire box  X1 L	
Wood Minifix  X19 C	Lock  X1 H		
Shelves fix screw  X8 D	Screw 4*20  X4 I		
Screw 3.5*14  X24 E	Lock metal fix  X1 J		

(2000X1000X760)

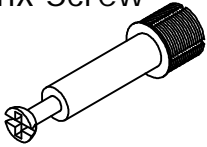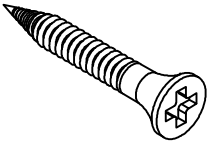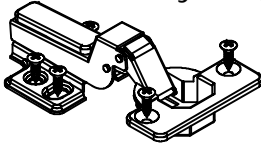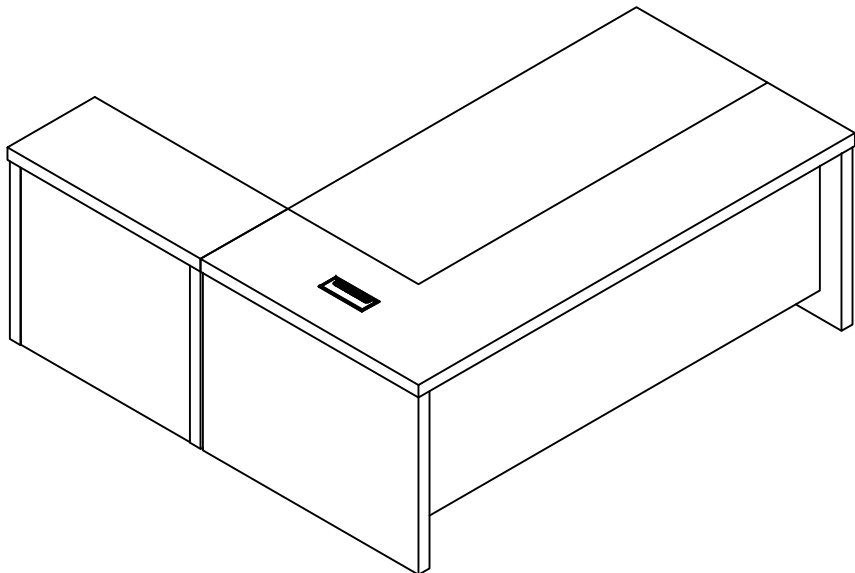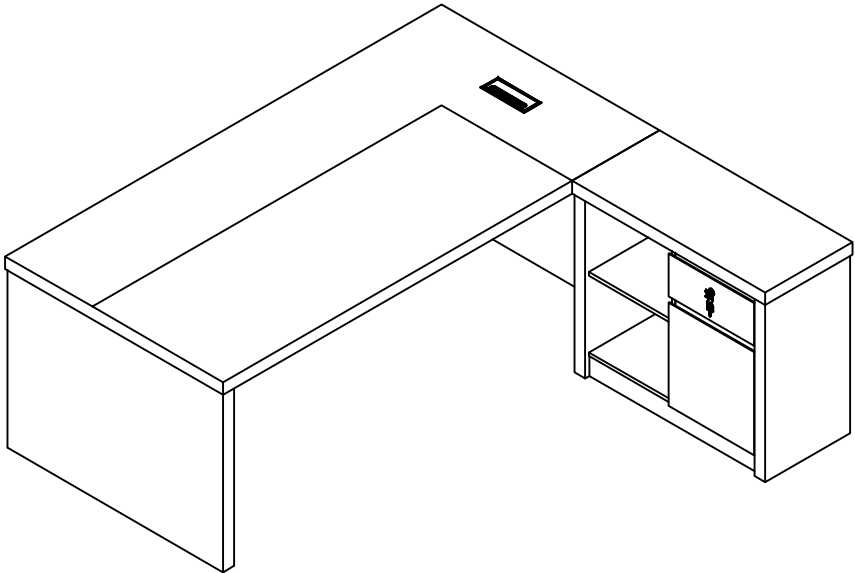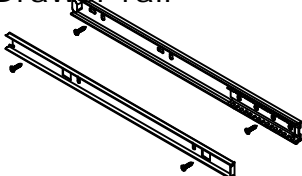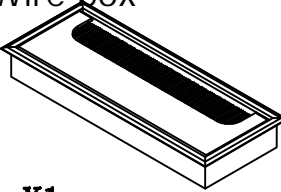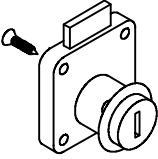


X10

A

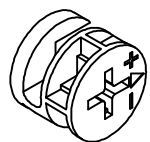

X10

B

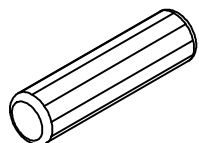


X3


C

STEP:1


To fix the panel 1 and 2

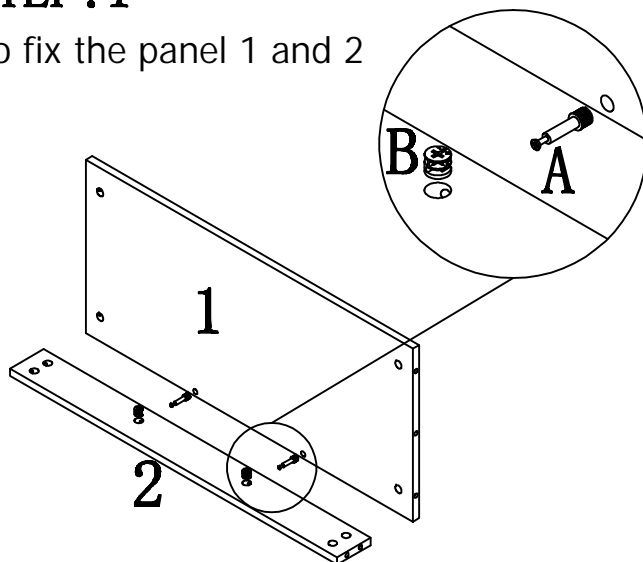


To fix the panel 3

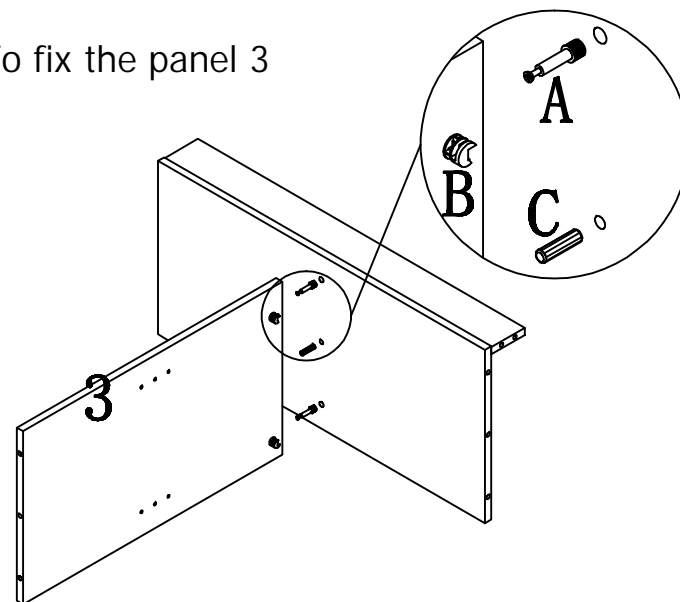

To fix the panel 4 and panel 5

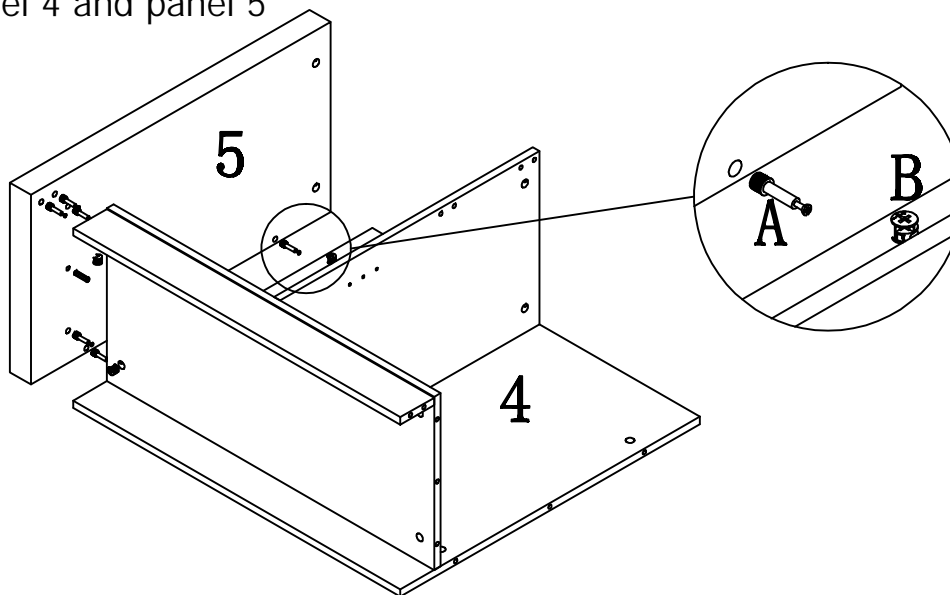

3. 5*14 STEP:2

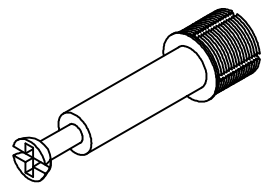


X12

A




X8

E

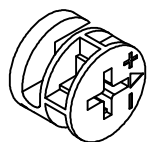


X12

B

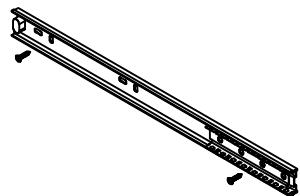


X1

G

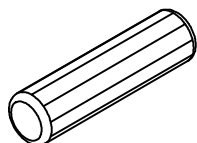

X13

C



X1


J





X8

D

To fix the top panel 8

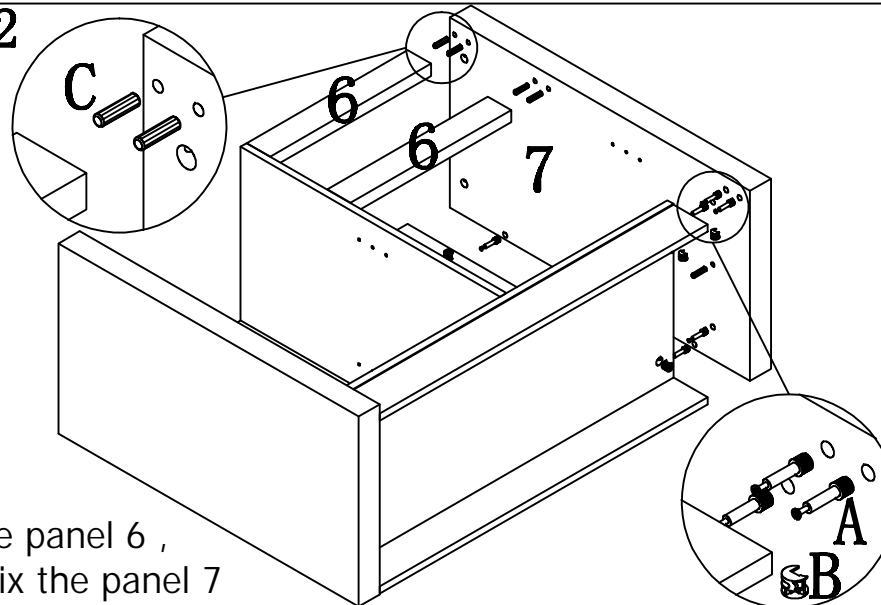

To fix the panel 6 ,
then to fix the panel 7

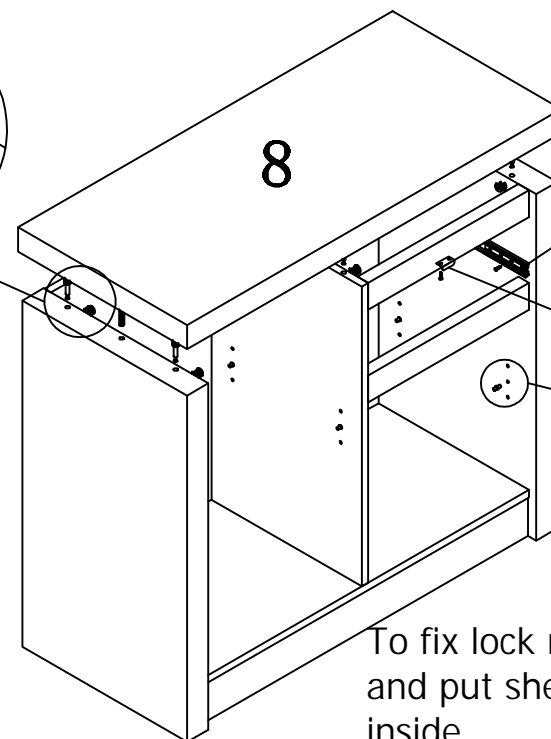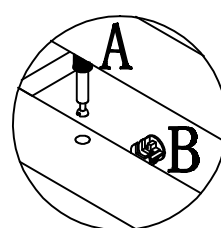


To fix the
both side rail

To fix lock metal fix J
and put shelves screw D
inside

STEP:3


X4

A

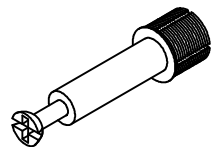

X1


H

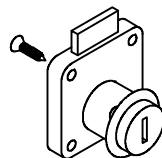

4*20


X4

B



X4

I



3.5*14


X16

E



X2

K

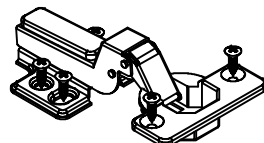


4*30

To put all shelves panel inside


X4

F

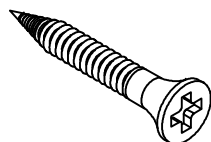

K+E




14

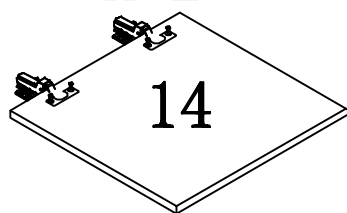



To fix hinges on door panel 14 and fix in cabinet

X1



G

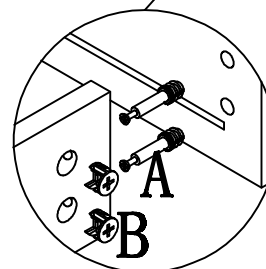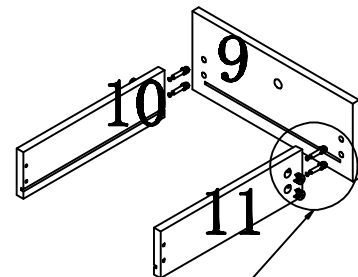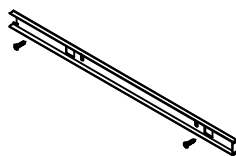


To fix the panel 9,10,11

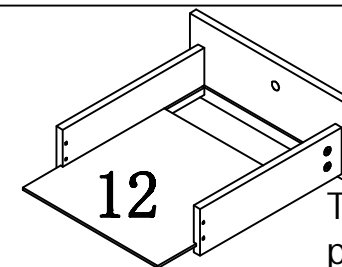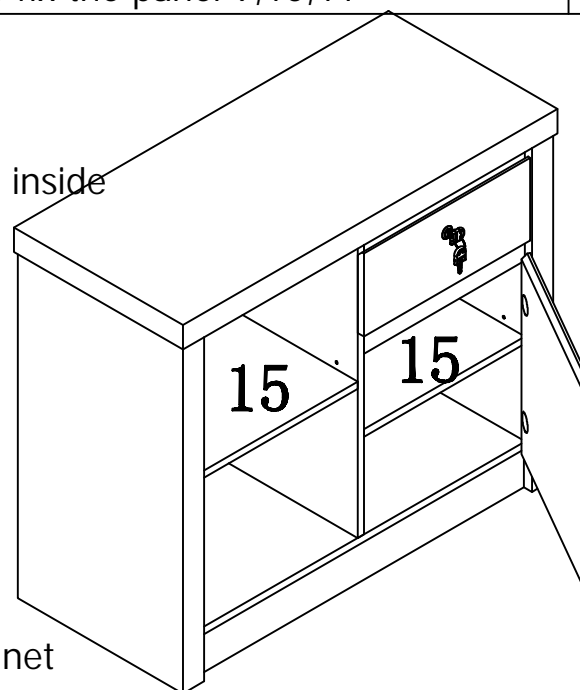


To put the panel 12 inside and fix the panel 13

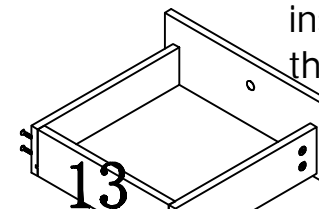


To fix the both side rail G

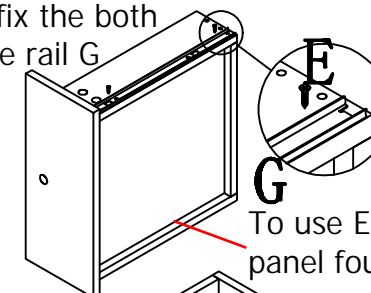


To use E to fix bottom panel four side more tough

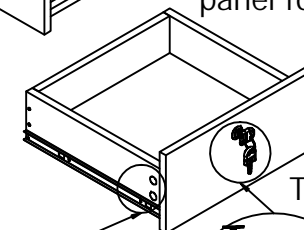


To fix the lock H

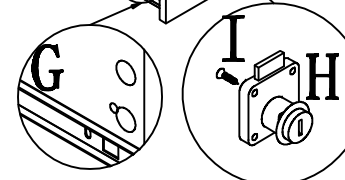

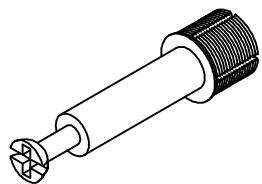


X4

A

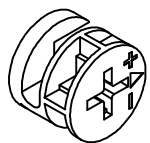

X2

B

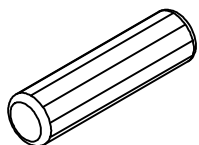



X2

C

STEP:4


To fix the table leg panel 16, front panel 17 and table leg panel 18

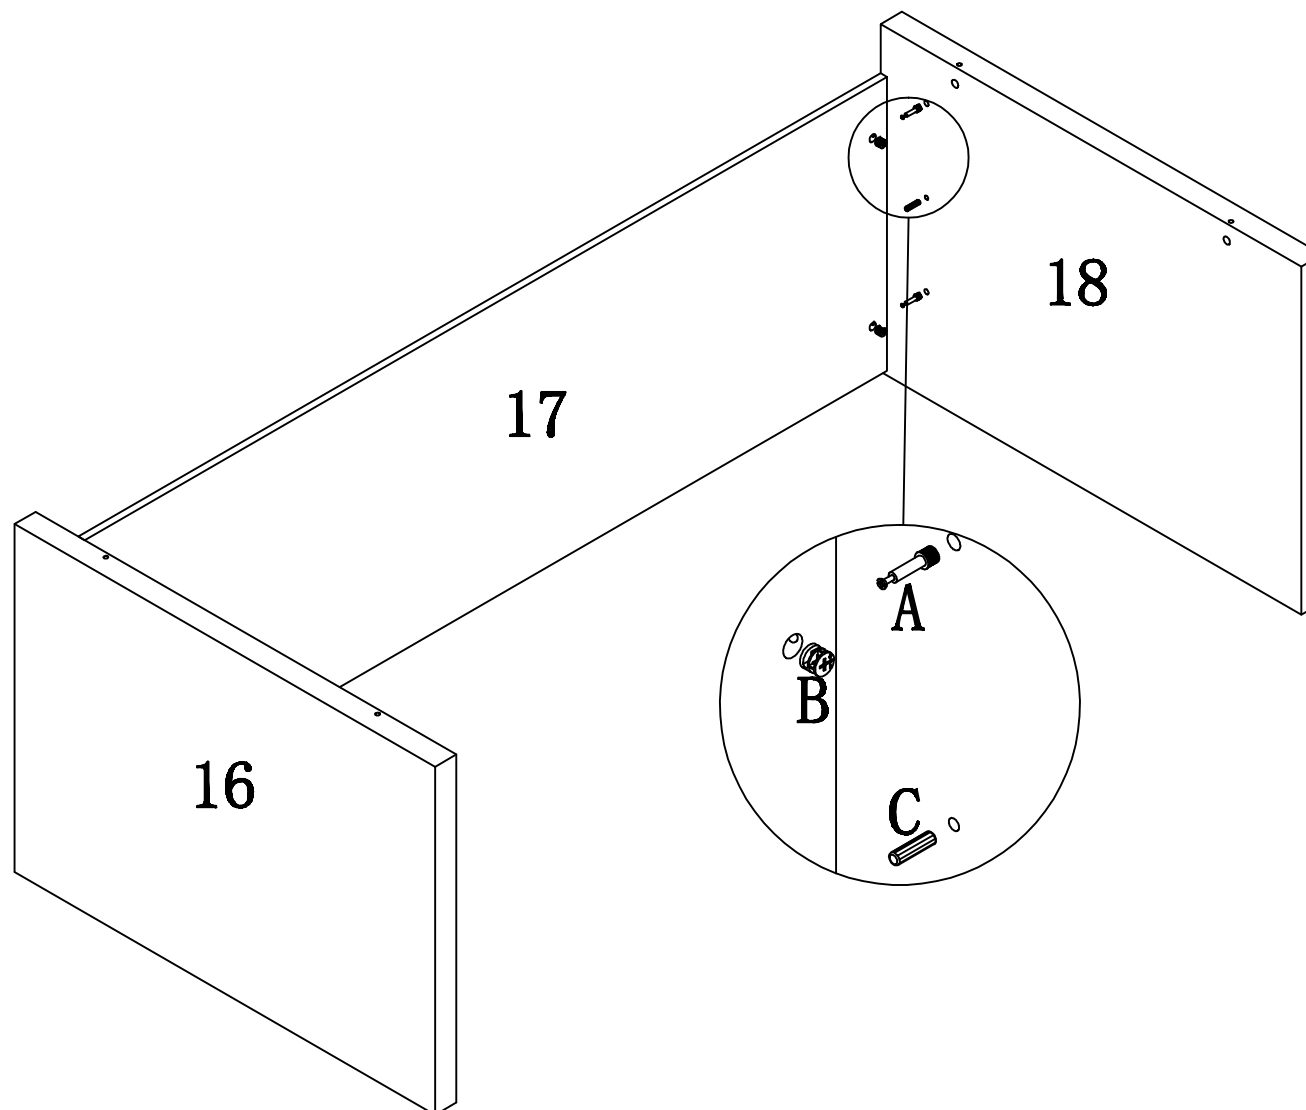

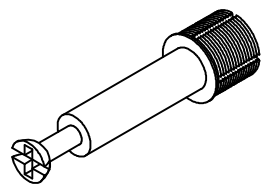

X4

A

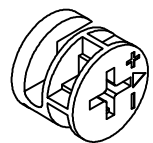


X2


B


STEP:5

To fix the table top panel 19

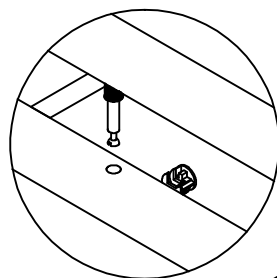

19

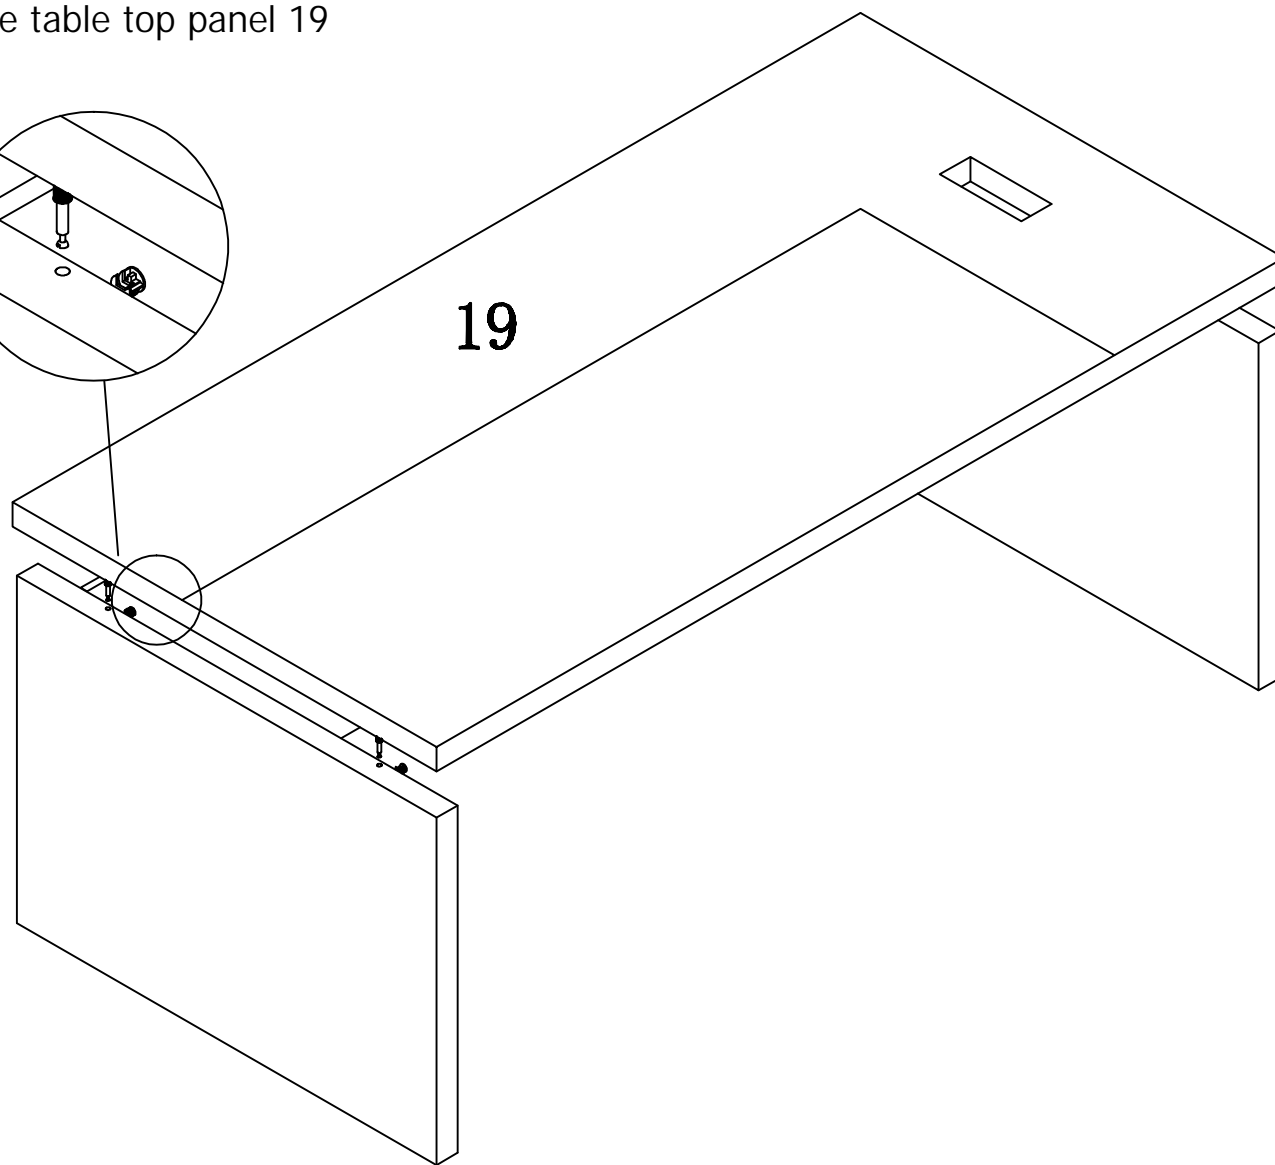

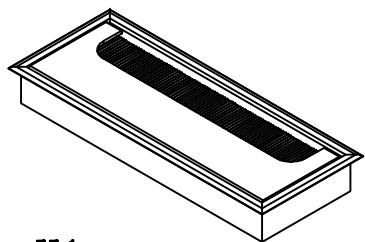

X1

L

STEP:6

To put the wire box L inside

FINISH

