



Drill two holes into the wall with a 70 cm interval and insert the anchors provided in the package.

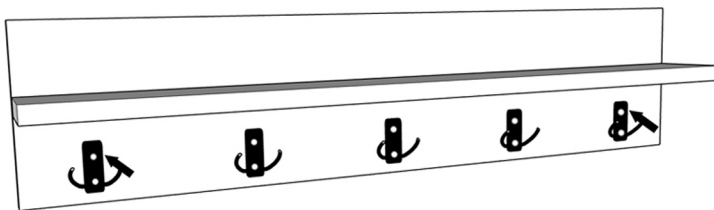

Screw the product onto the wall with long screws through the upper holes of the hooks at the first and last row.

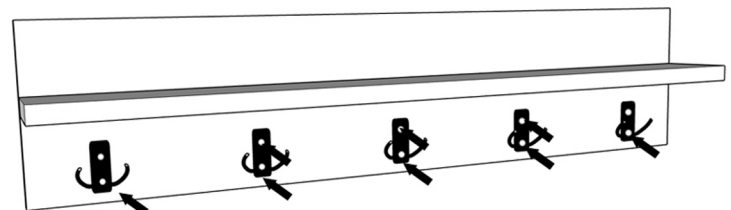

Screw the bottom screws of the first and last hooks, and all the screws of the remaining hooks, with 3.5x18 short screws. The product is now ready for use.